


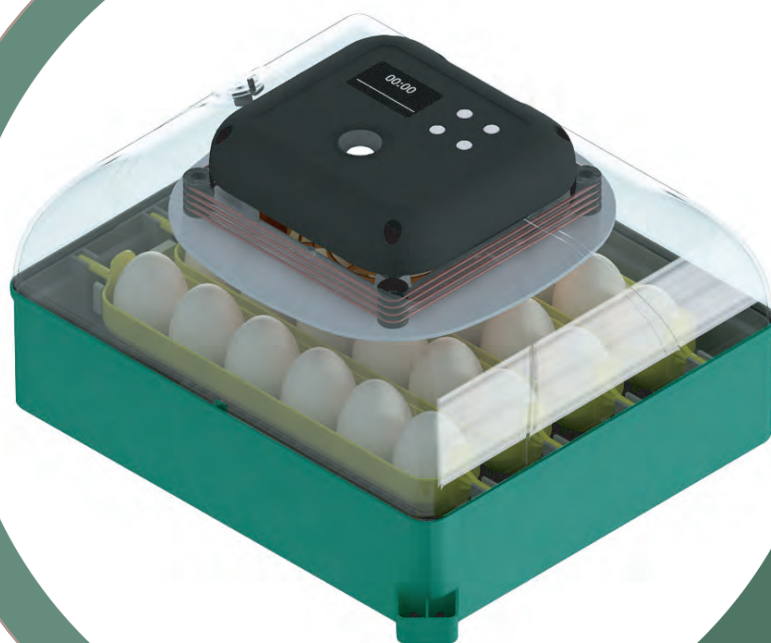

USER MANUAL

Incubator EU PROFI 24 EGGS

TABLE OF CONTENT

01 Installation

02 Temperature & Humidity

03 Settings Eggs & Turning

04 Egg Candler & Hatching

05 Factory Settings & Cleaning

Installation

Choosing the Right Location for Your Incubator


Incubation room environment can have a considerable effect on hatch rate.

The incubator need to be placed in a room with stable temperature between 72°-80°F. Pay attention to the room temperature to ensure that it doesn't drop below 70°F particularly at night. Do not place the incubator near a window to avoid direct sunlight and drafts.


CAUTION: DO NOT use the incubator on the floor. Air is not fresh close ot the ground due ot CO2 concentration.

Install the incubator

a) Fit the grey egg carrier link into the bottom slot where the red arrow pointed at on below image.

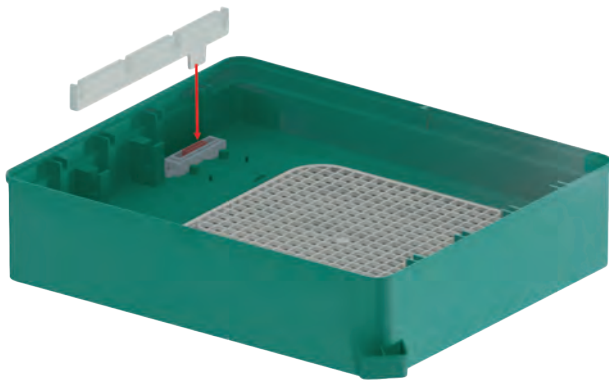


b) Then fit the yellow egg carrier into the grey egg carrier link. Pay attention to fit the end with two pegs into the correct two sockets.

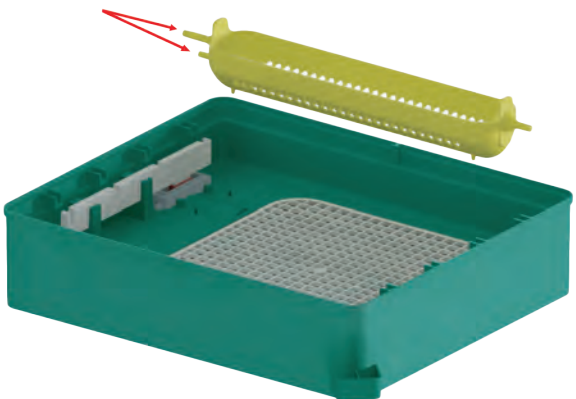

Must fit the end with two pegs into the two sockets on the incubator base, otherwise it won't work.

c) Plug the egg turner cord (coming out from the base) into the socket located on the back of the incubator top. Connect the power supply unit to the incubator top.

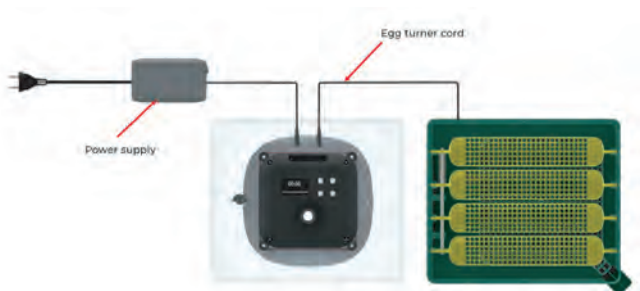

d) Reattach the top part onto the incubator base ensuring the clear window is completely closed, It's important to align the two notches on the bottom of the clear window with the two sockets on the base. If this is not done correctly warm air wil leak out causing inside temperature fluctuation.



Temperature & Humidity

Adjusting Temperature & Hatching Days

This incubator is factory pre-set to 99.5°F and 21 hatch days for chicken eggs.

Upon plugging the incubator into power, the timer will immediately begin its countdown from 21 days and the temperature will gradually increase to 99.5 °. To change the temperature, press and hold the "TEMP" button for 3 seconds, and the pre-set "99.5" will blink on the screen. Then, use the "+" or "-" buttons to adjust the temperature. When finished, press the "TEMP" button once more to save and exit the temperature setting mode.


To change the hatch days, press and hold the "DAY" button for 3 seconds, and the pre-set "D-21" will blink on the screen. Then, use the "+" or "-" buttons to adjust the hatch days. When finished, press the "DAY" button once more to save and exit the hatch days setting mode. During the initial warm up period, the "Low Temperature" alarm may be triggered as the unit slowly warms up to 99.5°F. This is normal due to the cooler starting temperature of the eggs, water, and ambient air inside the incubator.

To disable the alarm, press the "TEMP" button once.

Controlling Humidity

The humidity in the incubator can be roughly adjusted by adding water to one or both water pots via the external water filling port and can be further adjusted via the air vent knob to achieve the required humidity level, please follow below recommendations:

Important Note: Air vent can't be fully closed when use it to adjust humidity; the air vent should be set 1/2 open for first 18 days, if can't get 50~55% humidity with the 1/2 open setting, then further close the vent to increase humidity, BUT must ensure at least 1/3 open for first 18 days and must fully open for last 3 days to ensure adequate ventilation for chicken eggs.

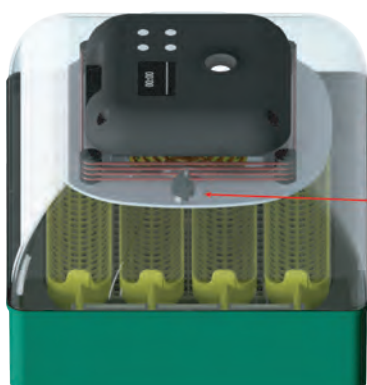

STEP 1


Fill water pot:

*i.e. Chicken eggs:

- fill pot "1" for day 1 - 18
- fill pot "1+2" for day 19 - 21

STEP 2

Adjust grey air vent knob and wait for 2-3 hours for the humidity to fully stabilize. Close the vent to increase humidity or open the vent to decrease humidity.

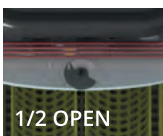

To ensure adequate air ventilation, recommend to set 1/2 open for first 18 days.



To ensure adequate ventilation, Must fully open the air vent for the last 3 days.

The grey plug on water pot "2" is used to prevent the warm air from leaking out. Do not remove it until 3 days prior to hatch day.

After adding water, the humidity may fluctuate. Allow 2-3 days for the humidity to fully stabilize before making any further adjustments.


Do not let the incubator run without water.

Set Eggs

Settings Eggs & Turning

Before setting eggs, ensure the incubator has been run for 4~5 hours with water filling into water pot "1". Also allow stored eggs to naturally warm up 6~8 hours to room temperature prior to putting into incubator. This will minimize the condensation on egg surface.


How to easily set eggs into the yellow egg carrier ?

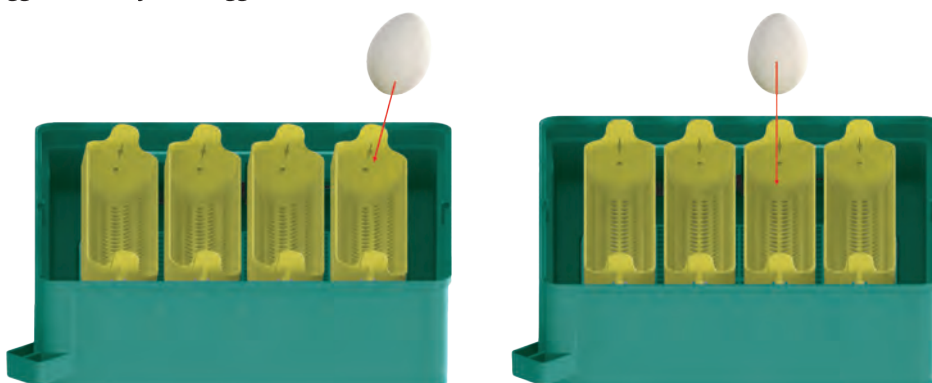


It would be inconvenient to set the eggs into the yellow egg carriers, if the egg carriers stop at the inclined position (image A). The recommended way is to press the "+" button one time, the yellow egg carriers will start to move, once the egg carriers move to the vertical position, press the "+" button again to have it stop at the vertical position. Now it would be much easier to set eggs into the yellow egg carriers.

The eggs need to be set lying flat or with their pointed ends facing down.

Pointed ends of eggs facing down

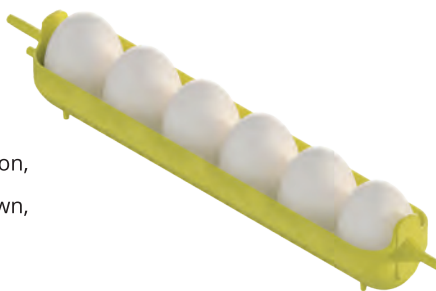

Eggs lying flat

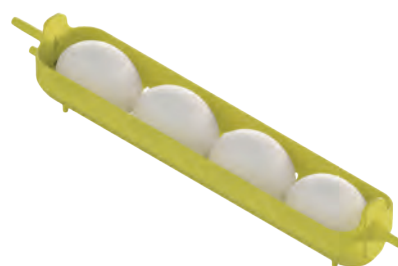

CAUTION: If set eggs in this vertical position, the pointed ends of eggs must face down, otherwise will decrease the hatch rate.

After setting the eggs, conduct 3-5 times turning test to check if each egg is sitting correctly and can turn smoothly. Conduct the test run by press the "+" button one time. Every 60 minutes, the automatic egg turner tilts eggs from side to side.

IMPORTANT NOTE:

1) The timer will begin the countdown from 21 days immediately unplugging the unit in. After running the incubator without eggs for several hours to allow it to stabilize, the timer will need to reset to the full incubation period. To ensure that the timer is accurate to 21 days, reset the timer after setting the eggs. To reset the incubator timer, press and hold the "DAY" and "-" buttons for 3 seconds. The incubator will reset to exactly 21 days and restart the countdown from 21 days.

2) When hatch complete, the timer will countdown to 0 day but won't automatically reset to 21 days to start a new round of countdown, so each time you start a new hatch, remember to reset the timer after you put in new eggs, otherwise the egg turner won't work.

Egg Candler & Hatching

Using the Built-in Egg Candler


Gently place the large end of egg into the candling zone. Press the candling button and observe the interior of the egg.

Tips:

- Dimming room light will make observation easier
- During candling, the room temperature is much lower than that in the incubator, for this reason, it's recommended to complete candling in less than 5 minutes.


Preparing for hatching

When the day countdown reaches 3 days before hatching, the egg turner will auto stop turning the eggs and the egg turning icon will disappear on the screen.

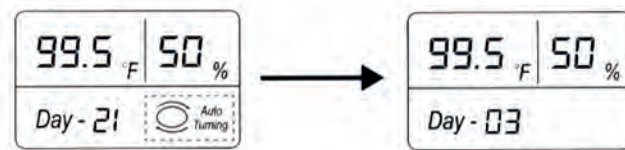


This is a reminder to remove the yellow egg carrier from the incubator base and also to increase the humidity. Follow the steps below:

- 1) Press the "+" button one time, the yellow egg carriers will start to move, once the egg carriers move to the vertical position, press the "+" again to have it stop at the vertical position. now it would be much easier to remove the yellow egg carrier from the incubator base.

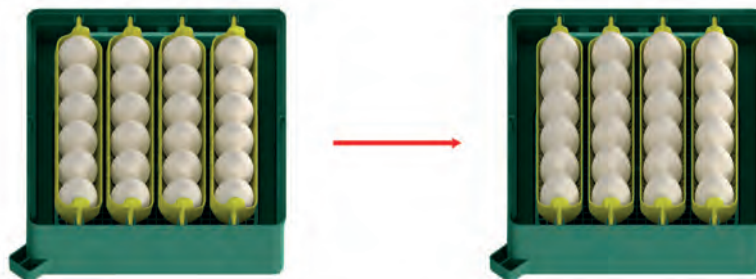

- 2) Then hold the two small handles on the yellow egg carrier to remove it from the incubator base. There are four small feet on the bottom of each egg carrier, so the egg carrier can stand on the table by itself.

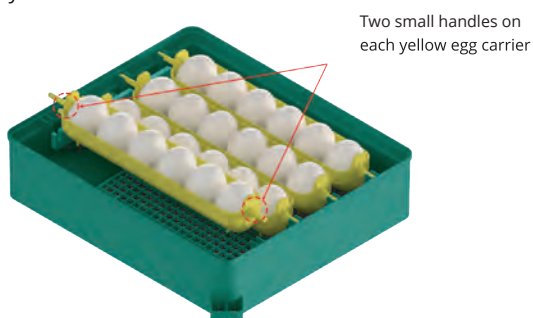

- 3) Move the eggs from the egg carriers to the incubator base. DO NOT remove the egg carrier link from the base, it can help reduce the dirt falling into the bottom egg turner motor chamber



- 4) Remove the grey plug from water pot "2", fill both water pot "1" and "2" and FULLY open the air vent.

Factory Settings & Cleaning

Returning to Factory settings

Resetting the incubator will return it to the factory settings of 99.5F and 21 hatch days. To reset the incubator, press and hold both "DAY" and "-" buttons for more than 3 seconds, the incubator will beep and the display will blink one time, indicating that the incubator has successfully been reset. The incubator timer will then restart the countdown from 21 days again.

Cleaning the Incubator

Must disconnect the incubator from the mains power supply before cleaning. Wipe all internal surface with a disinfection solution using a damp cloth. Then wipe off with a clean water damp cloth.

Ensure that all electrical parts are kept dry during cleaning. Do not immerse any electrical parts!

Important Note :


- 1) Do not immerse the incubator base into water, would damage the egg turner motor !
- 2) After clean the incubator, plug the incubator into power to dry run (with no added water) for 24 hours to ensure it is thoroughly dry before usage.

WARNING :

- 1) This incubator is not a toy ! Children should not play with the incubator and must be supervised by an adult when using it.
- 2) This incubator is only to be used with the power supply unit provided.
- 3) This incubator must be placed in an area where it is out of the reach of animals.
- 4) DO NOT use this incubator on the floor. Air is not fresh close to the ground due to CO2 concentration.

Fahrenheit to Celsius Conversion Table (°F in °C)

°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C
90	32.22	94.3	34.61	98.6	37.0	102.9	39.39	107.2	41.78	111.5	44.17	115.8	46.39
90.1	32.28	94.4	34.67	98.7	37.06	103	39.44	107.3	41.83	111.6	44.22	115.9	46.44
90.2	32.34	94.5	34.72	98.8	37.11	103.1	39.5	107.4	41.89	111.7	44.28	116	46.5
90.3	32.39	94.6	34.78	98.9	37.17	103.2	39.56	107.5	41.94	111.8	44.33	116.1	46.56
90.4	32.44	94.7	34.83	99	37.22	103.3	39.61	107.6	42.0	111.9	44.39	116.2	46.61
90.5	32.5	94.8	34.89	99.1	37.28	103.4	39.67	107.7	42.06	112	44.44	116.3	46.67
90.6	32.56	94.9	34.94	99.2	37.33	103.5	39.72	107.8	42.11	112.1	44.5	116.4	46.72
90.7	32.61	95	35.0	99.3	37.39	103.6	39.78	107.9	42.17	112.2	44.56	116.5	46.78
90.8	32.67	95.1	35.06	99.4	37.44	103.7	39.83	108	42.22	112.3	44.61	116.6	46.83
90.9	32.72	95.2	35.11	99.5	37.5	103.8	39.89	108.1	42.28	112.4	44.67	116.7	46.89
91	32.78	95.3	35.17	99.6	37.56	103.9	39.94	108.2	42.33	112.5	44.72	116.8	46.94
91.1	32.83	95.4	35.22	99.7	37.61	104	40.0	108.3	42.39	112.6	44.78	116.9	47.0
91.2	32.89	95.5	35.28	99.8	37.67	104.1	40.06	108.4	42.44	112.7	44.83	117	47.06
91.3	32.94	95.6	35.33	99.9	37.72	104.2	40.11	108.5	42.5	112.8	44.89	117.1	47.11
91.4	33.0	95.7	35.39	100	37.78	104.3	40.17	108.6	42.56	112.9	44.94	117.2	47.17
91.5	33.06	95.8	35.44	100.1	37.83	104.4	40.22	108.7	42.61	113	45.0	117.3	47.22
91.6	33.11	95.9	35.5	100.2	37.89	104.5	40.28	108.8	42.67	113.1	45.06	117.4	47.28
91.7	33.17	96	35.56	100.3	37.94	104.6	40.33	108.9	42.72	113.2	45.11	117.5	47.33
91.8	33.22	96.1	35.61	100.4	38.0	104.7	40.39	109	42.78	113.3	45.17	117.6	47.39
91.9	33.28	96.2	35.67	100.5	38.06	104.8	40.44	109.1	42.83	113.4	45.22	117.7	47.44
92	33.33	96.3	35.72	100.6	38.11	104.9	40.5	109.2	42.89	113.5	45.28	117.8	47.5
92.1	33.39	96.4	35.78	100.7	38.17	105	40.56	109.3	42.94	113.6	45.33	117.9	47.56
92.2	33.44	96.5	35.83	100.8	38.22	105.1	40.61	109.4	43.0	113.7	45.39	118	47.61
92.3	33.5	96.6	35.89	100.9	38.28	105.2	40.67	109.5	43.06	113.8	45.44	118.1	47.67
92.4	33.56	96.7	35.94	101	38.33	105.3	40.72	109.6	43.11	113.9	45.5	118.2	47.72
92.5	33.61	96.8	36.0	101.1	38.39	105.4	40.78	109.7	43.17	114	45.56	118.3	47.78
92.6	33.67	96.9	36.06	101.2	38.44	105.5	40.83	109.8	43.22	114.1	45.61	118.4	47.83
92.7	33.72	97	36.11	101.3	38.5	105.6	40.89	109.9	43.28	114.2	45.67	118.5	47.89
92.8	33.78	97.1	36.17	101.4	38.56	105.7	40.94	110	43.33	114.3	45.72	118.6	47.94
92.9	33.83	97.2	36.22	101.5	38.61	105.8	41.0	110.1	43.39	114.4	45.78	118.7	48.0
93	33.89	97.3	36.28	101.6	38.67	105.9	41.06	110.2	43.44	114.5	45.83	118.8	48.06
93.1	33.94	97.4	36.33	101.7	38.72	106	41.11	110.3	43.5	114.6	45.89	118.9	48.11
93.2	34.0	97.5	36.39	101.8	38.78	106.1	41.17	110.4	43.56	114.7	45.94	119	48.17
93.3	34.06	97.6	36.44	101.9	38.83	106.2	41.22	110.5	43.61	114.8	46.0	119.1	48.22
93.4	34.11	97.7	36.5	102	38.89	106.3	41.28	110.6	43.67	114.9	46.06	119.2	48.28
93.5	34.17	97.8	36.56	102.1	38.94	106.4	41.33	110.7	43.72	115	46.11	119.3	48.33
93.6	34.22	97.9	36.61	102.2	39.0	106.5	41.39	110.8	43.78	115.1	46.17	119.4	48.39
93.7	34.28	98	36.67	102.3	39.06	106.6	41.44	110.9	43.83	115.2	46.22	119.5	48.44
93.8	34.33	98.1	36.72	102.4	39.11	106.7	41.5	111	43.89	115.3	46.28	119.6	48.5
93.9	34.39	98.2	36.78	102.5	39.17	106.8	41.56	111.1	43.94	115.4	46.33	119.7	48.56
94	34.44	98.3	36.83	102.6	39.22	106.9	41.61	111.2	44.0	115.5	46.39	119.8	48.61
94.1	34.5	98.4	36.89	102.7	39.28	107	41.67	111.3	44.06	115.6	46.44	119.9	48.67
94.2	34.56	98.5	36.94	102.8	39.33	107.1	41.72	111.4	44.11	115.7	46.5	120	48.72

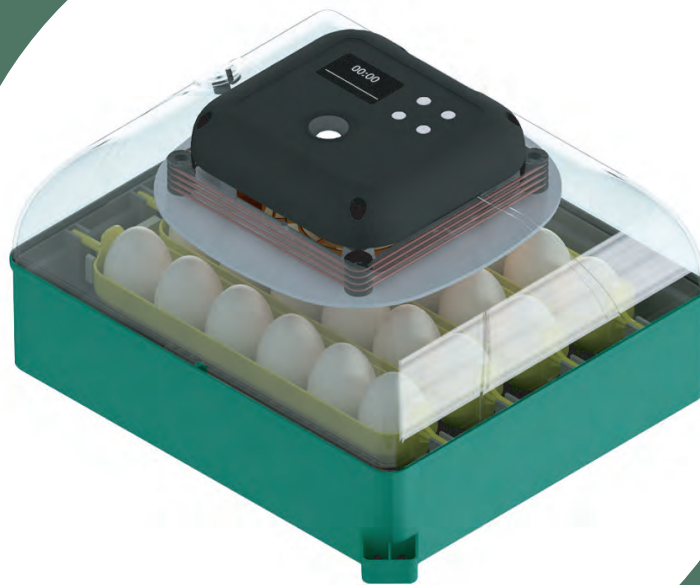


Contact Us!

📍 **AGROFORTEL, s.r.o.**
Jaurisova 515/4, 140 00 Praha, IČO: 06410499

☎ **+420 380 60 30 30**

✉ **agrofortel@agrofortel.cz**

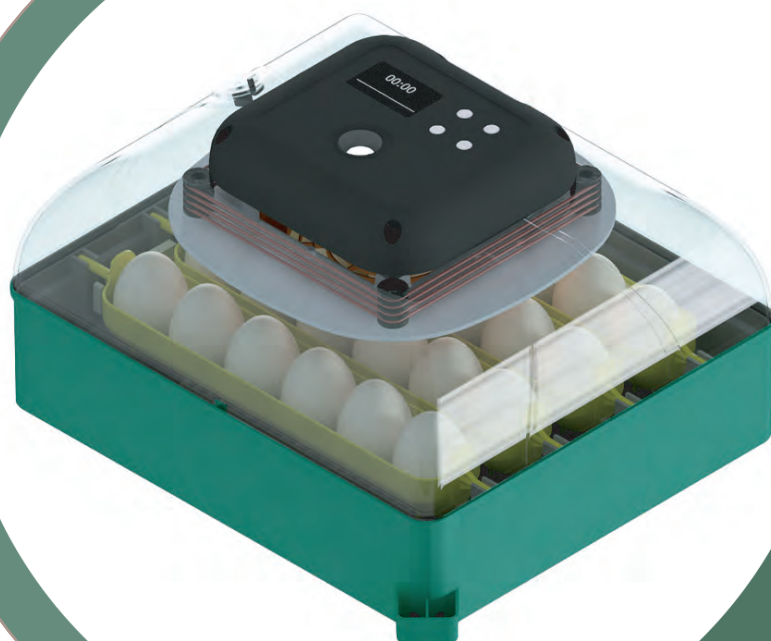

Návod k použití

Líheň EU PROFI 24

OBSAH

01 Instalace

02 Teplota a vlhkost

03 Vkládání vajec a otáčení

04 Prosvětlování vajec a líhnutí

05 Tovární nastavení a čištění

Instalace

Volba správného prostředí pro líhnutí


Prostředí inkubační místnosti může mít značný vliv na rychlost líhnutí.

Líheň musí být umístěna v místnosti se stabilní teplotou mezi 22°-26°C (cca 72-80 °F). Věnujte pozornost pokojové teplotě, a zajistěte, aby zejména v noci teplota neklesla pod 21 °C. Neumísťujte inkubátor do blízkosti okna, aby nedošlo k přímému slunečnímu záření a průvanu.

POZOR: NEPOUŽÍVEJTE inkubátor na podlaze. Vzduch není u země čerstvý kvůli koncentraci CO₂.


Sestavení líhně

a) Vložte šedý spojovací článek nosiče vajec do spodního otvoru, kde červená šipka ukazuje na níže uvedeném obrázku.

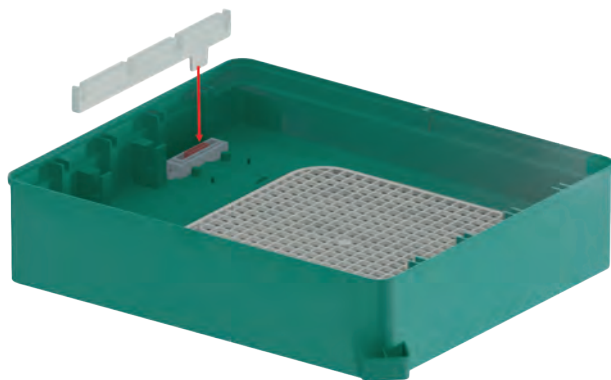


b) Potom vložte žluté lísky na vejce do šedého spojovacího článku. Dbejte na to, aby konec se dvěma kolíky zapadl do správných dvou objímek.

Konec se dvěma kolíky musí zapadnout do dvou zásuvek na základně inkubátoru, jinak nebude fungovat.

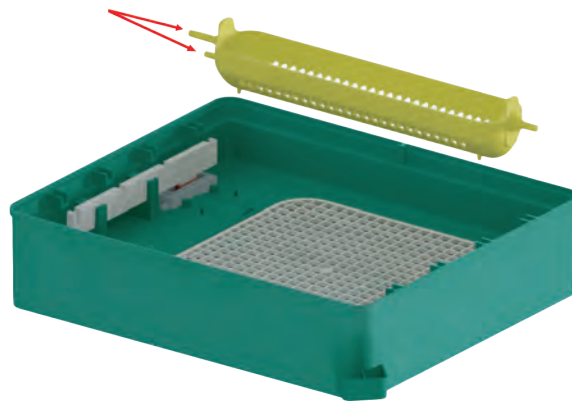

c) Zapojte kabel obraceče vajec (vycházející ze základny) do zásuvky umístěné na zadní straně horní části inkubátoru. Připojte napájecí jednotku k horní části inkubátoru.

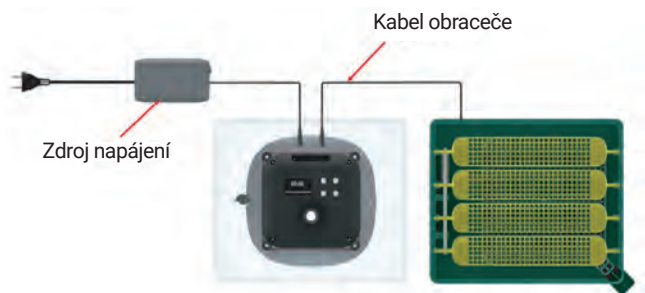

d) Znovu nasadte horní část na základnu inkubátoru a ujistěte se, že je zcela uzavřena. Důležité je sladit dva zářezy na spodní straně průhledného krytu se dvěma výstupky na základně. Pokud nebude vrchní kryt přesně dosedat na základnu, bude teplý vzduch unikat ven a způsobovat kolísání teploty uvnitř.



Teplota a vlhkost


Nastavení teploty a počítadla dnů

Tento inkubátor je z výroby přednastaven na 99.5 F (37.5 °C) a 21 dnů líhnutí pro slepičí vejce. Po zapojení inkubátoru do napájení začne časovač okamžitě odpočítávat 21 dnů a teplota se postupně zvýší na 99,5° F. Pro změnu teploty stiskněte a podržte tlačítko "TEMP" po dobu 3 sekund a na displeji začne blikat přednastavená hodnota "99,5". Poté pomocí tlačítek "+" nebo "-" upravte teplotu. Po dokončení ještě jednou stiskněte tlačítko "TEMP" pro uložení a ukončení režimu nastavení teploty. Chcete-li změnit dobu líhnutí, stiskněte a podržte tlačítko "DAY" po dobu 3 sekund a na obrazovce začne blikat přednastavené "D-21". Poté pomocí tlačítek "+" nebo "-" nastavte dny líhnutí. Po dokončení ještě jednou stiskněte tlačítko "DAY" pro uložení a ukončení režimu nastavení dnů líhnutí. Během počátečního zahřívání se může spustit alarm "Nízká teplota", protože jednotka se pomalu zahřívá na 99,5 F. To je normální vzhledem k nižší počáteční teplotě vajec, vody a okolního vzduchu uvnitř inkubátoru. Chcete-li alarm vypnout, stiskněte jednou tlačítko "TEMP".

Nastavení vlhkosti

Vlhkost v inkubátoru lze zhruba nastavit přidáváním vody do jedné nebo obou nádrží na vodu přes externí otvor pro plnění a dále ji lze upravit pomocí knoflíku ventilace. Aby se dosáhlo požadované úrovně vlhkosti, dodržujte prosím následující doporučení:

Ventilační otvor nesmí být zcela uzavřen; ventilační otvor by měl být nastaven na 1/2 otevřený po dobu prvních 18 dnů, pokud nelze dosáhnout 50~55% vlhkosti při nastavení 1/2 otevřeného ventilačního otvoru, pak přivřete ventilační otvor, aby se zvýšila vlhkost, ALE musí být zachována alespoň 1/3 otevřeného ventilačního otvoru po dobu prvních 18 dnů. **Po dobu posledních 3 dnů musí být ventilace plně otevřena**, aby bylo zajištěno dostatečné provzdušnění slepičích vajec.

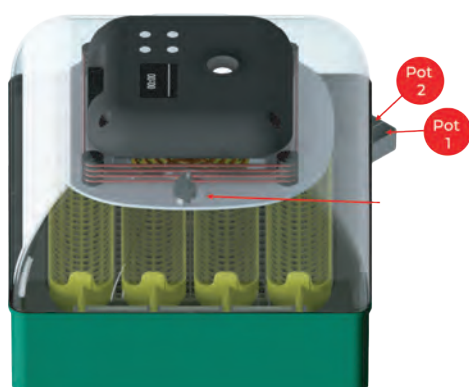

KROK 1

Naplňte nádobu na vodu:

*Slepičí vejce:


- Naplňte nádobu "1" pro 1. - 18. den.
- Naplňte nádoby "1" a "2" pro dny 19-21

KROK 2

Nastavte šedý knoflík odvzdušnění a počkejte 2-3 hodiny, než se vlhkost vzduchu plně stabilizovala. Zavřete ventilační knoflík, aby se zvýšila vlhkost, nebo otevřete ventilační knoflík. pro snížení vlhkosti.



Pro zajištění dostatečného větrání doporučujeme nastavit 1/2 otevření na prvních 18 dní.

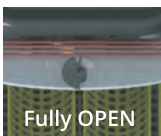

Aby bylo zajištěno dostatečné větrání, musíte poslední 3 dny úplně otevřít větrací otvor.

Šedá zátka na nádobě na vodu "2" slouží k zabránění úniku teplého vzduchu. Neodstraňujte ji dříve než 3 dny před dnem líhnutí.


Po přidání vody může vlhkost kolísat. Před jakýmkoliv dalšími úpravami vyčkejte 2-3 dny, než se vlhkost zcela ustálí. Nenechávejte inkubátor v provozu bez vody.

Vkládání vajec a otáčení

Vložení vajec a otáčení


Před vložení vajec se ujistěte, že inkubátor běží 4~5 hodin a voda je naplněna do nádoby "1". Rovněž nechte uskladněná vejce přirozeně před vložení do inkubátoru zahřát na pokojovou teplotu 6~8 hodin. Tím se minimalizuje kondenzace na povrchu vajec.

Jak snadno umístit vejce do žlutých nosičů vajec (lísky)?

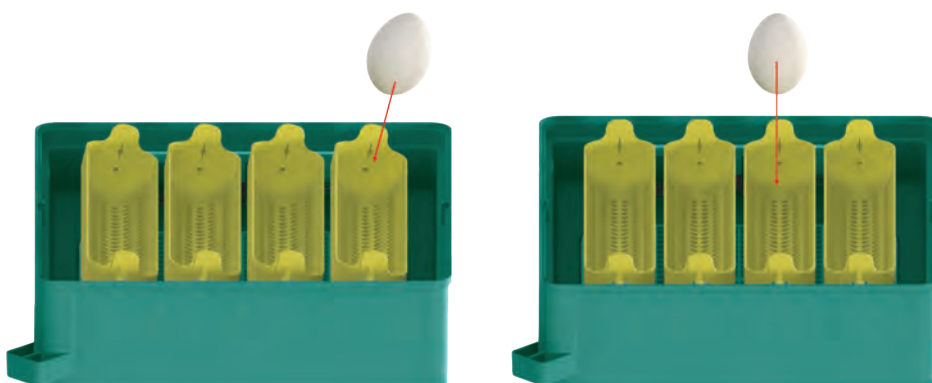


Vejce by nebylo vhodné vkládat do žlutých nosičů vajec, pokud by se nosiče vajec zastavily v nakloněné poloze (obrázek A). Doporučujeme jednou stisknout tlačítko "+", žluté nosiče vajec se začnou pohybovat, jakmile se nosiče vajec přesunou do svislé polohy, stiskněte tlačítko "+", aby se zastavily ve svislé poloze. Nyní vložte vejce do žlutých nosičů. Vejce můžete nasaďdit naležato, nebo špičkou dolů.

Varianta špičkou dolů

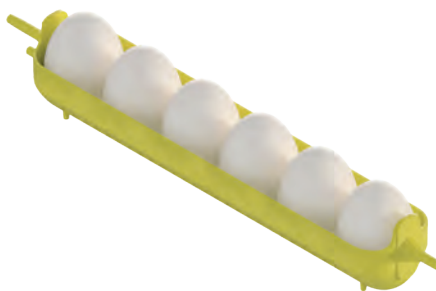

POZOR: Pokud vejce umístíte do této svislé polohy, musí špičaté konce vajec směřovat dolů, jinak se sníží úspěšnost líhnutí.

Varianta na ležato

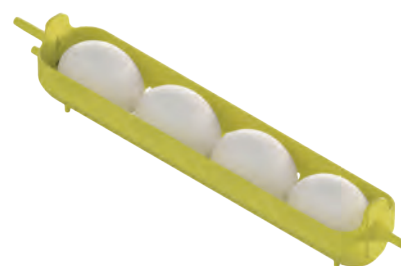

Po usazení vajec proveďte 3-5krát test otáčení, abyste zkontrolovali, zda každé vejce sedí správně a zda se může hladce otáčet. Proveďte zkušební chod jedním stisknutím tlačítka "+". Každých 60 minut automatický obraceč vajec obrátí vejce z jedné strany na druhou.

DŮLEŽITÉ UPOZORNĚNÍ:

1) Časovač začne odpočítávat čas od 21 dnů ihned po zapojení jednotky do zásuvky. Po několikahodinovém provozu inkubátoru bez vajec (aby se stabilizoval) bude třeba časovač resetovat na celou dobu inkubace. Chcete-li zajistit, aby časovač byl přesný na 21 dní, resetujte časovač po nastavení vajec. Chcete-li časovač inkubátoru resetovat, stiskněte a podržte tlačítka "DAY" a "-" po dobu 3 sekund. Počítadlo se vynuluje a znovu spustí odpočítávání.

2) Po dokončení líhnutí bude počítadlo ukazovat 0 dnů, ale neresetuje se na 21 dnů, takže pokaždé, když začnete nové líhnutí, nezapomeňte časovač resetovat po vložení nových vajec, jinak nebude obraceč vajec fungovat.

Prosvětlování vajec a líhnutí

Používání zabudované prosvětlovačky

Větší konec vajíčka opatrně vložte do prostoru prosvětlovačky. Stiskněte tlačítko prosvětlování a pozorujte vnitřek vejce.

Tip:


- Pozorování usnadní tlumené světlo v místnosti.
- Během prosvětlování je teplota v místnosti mnohem nižší než v inkubátoru, z tohoto důvodu se doporučuje dokončit celý proces v době kratší než pět minut.

Příprava k líhnutí

Když odpočítávání dnů dosáhne 3 dnů před vylíhnutím, obraceč vajec automaticky přestane otáčet vejce a ikona otáčení vajec na obrazovce zmizí.




Toto je připomínka k odstranění žlutého nosiče vajec ze základny inkubátoru a také ke zvýšení vlhkosti vzduchu. Postupujte podle následujících kroků: 1) Jednou stiskněte tlačítko "+", žlutý nosič vajec se začne pohybovat, jakmile se nosič vajec přesune do svislé polohy, stiskněte znovu tlačítko "+", aby se zastavil ve svislé poloze, nyní bude mnohem snazší vyjmout žlutý nosič vajec ze základny inkubátoru.

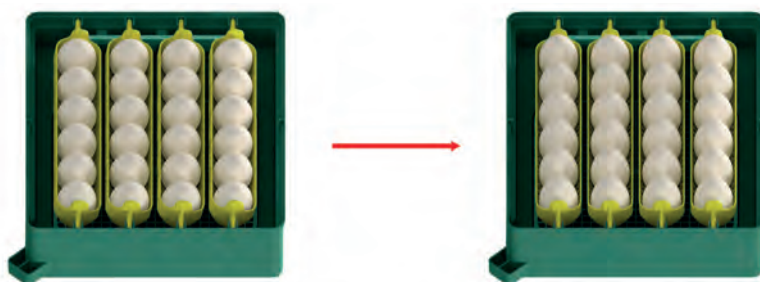

2) Poté uchopte dvě malá držadla na žlutém nosiči vajec a vyjměte jej ze základny inkubátoru. Na spodní straně každého nosiče vajec jsou čtyři malé nožičky, takže nosič vajec může sám stát na stole.

3) Přemístěte vejce z nosičů vajec do základny inkubátoru. NEODSTRAŇUJTE článek nosičů vajec ze základny, zabráníte tak padání nečistot do spodní komory motoru obraceče vajec.

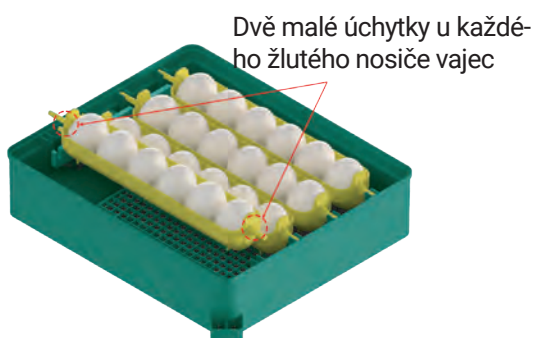

4) Vyjměte šedou zátku z nádoby na vodu "2", naplňte obě nádoby na vodu "1" a "2" a ÚPLNĚ otevřete ventilační otvor.

Tovární nastavení a čištění

Návrat do továrního nastavení

Přenastavením inkubátoru se vrátíte k továrnímu nastavení 99,5 F a 21 dnů líhnutí. Chcete-li inkubátor resetovat, stiskněte a podržte obě tlačítka "DAY" a " " déle než 3 sekundy, inkubátor zapípá a displej jednou zabliká, což znamená, že inkubátor byl úspěšně resetován. Časovač inkubátoru poté znovu spustí odpočítávání od 21 dnů.

Čištění líhně

Před čištěním je nutné inkubátor odpojit od elektrické sítě. Otřete celý vnitřní povrch dezinfekčním roztokem pomocí vlhkého hadříku. Poté otřete čistou vodou navlhčeným hadříkem.

Zajistěte, aby všechny elektrické části zůstaly během čištění suché. Neponořujte žádné elektrické části do vody!

Pozor:


- 1) Neponořujte základnu inkubátoru do vody, poškodilo by to motor obraceče vajec!
- 2) Po vyčištění inkubátoru jej zapojte do elektrické sítě, aby běžel 24 hodin nasucho (bez přidané vody) a zajistěte, že bude před dalším použitím důkladně vysušený.

VAROVÁNÍ :

- 1) Toto není hračka! Děti by si s líhní neměly hrát a při její používání musí být pod dohledem dospělé osoby.
- 2) Tento inkubátor se smí používat pouze s dodanou napájecí jednotkou.
- 3) Tento inkubátor musí být umístěn na místě, kde je mimo dosah zvířat.
- 4) Tento inkubátor NELZE používat na podlaze. Vzduch v blízkosti země není čerstvý kvůli koncentraci CO₂.

Převodník jednotek

°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C
90	32.22	94.3	34.61	98.6	37.0	102.9	39.39	107.2	41.78	111.5	44.17	115.8	46.39
90.1	32.28	94.4	34.67	98.7	37.06	103	39.44	107.3	41.83	111.6	44.22	115.9	46.44
90.2	32.34	94.5	34.72	98.8	37.11	103.1	39.5	107.4	41.89	111.7	44.28	116	46.5
90.3	32.39	94.6	34.78	98.9	37.17	103.2	39.56	107.5	41.94	111.8	44.33	116.1	46.56
90.4	32.44	94.7	34.83	99	37.22	103.3	39.61	107.6	42.0	111.9	44.39	116.2	46.61
90.5	32.5	94.8	34.89	99.1	37.28	103.4	39.67	107.7	42.06	112	44.44	116.3	46.67
90.6	32.56	94.9	34.94	99.2	37.33	103.5	39.72	107.8	42.11	112.1	44.5	116.4	46.72
90.7	32.61	95	35.0	99.3	37.39	103.6	39.78	107.9	42.17	112.2	44.56	116.5	46.78
90.8	32.67	95.1	35.06	99.4	37.44	103.7	39.83	108	42.22	112.3	44.61	116.6	46.83
90.9	32.72	95.2	35.11	99.5	37.5	103.8	39.89	108.1	42.28	112.4	44.67	116.7	46.89
91	32.78	95.3	35.17	99.6	37.56	103.9	39.94	108.2	42.33	112.5	44.72	116.8	46.94
91.1	32.83	95.4	35.22	99.7	37.61	104	40.0	108.3	42.39	112.6	44.78	116.9	47.0
91.2	32.89	95.5	35.28	99.8	37.67	104.1	40.06	108.4	42.44	112.7	44.83	117	47.06
91.3	32.94	95.6	35.33	99.9	37.72	104.2	40.11	108.5	42.5	112.8	44.89	117.1	47.11
91.4	33.0	95.7	35.39	100	37.78	104.3	40.17	108.6	42.56	112.9	44.94	117.2	47.17
91.5	33.06	95.8	35.44	100.1	37.83	104.4	40.22	108.7	42.61	113	45.0	117.3	47.22
91.6	33.11	95.9	35.5	100.2	37.89	104.5	40.28	108.8	42.67	113.1	45.06	117.4	47.28
91.7	33.17	96	35.56	100.3	37.94	104.6	40.33	108.9	42.72	113.2	45.11	117.5	47.33
91.8	33.22	96.1	35.61	100.4	38.0	104.7	40.39	109	42.78	113.3	45.17	117.6	47.39
91.9	33.28	96.2	35.67	100.5	38.06	104.8	40.44	109.1	42.83	113.4	45.22	117.7	47.44
92	33.33	96.3	35.72	100.6	38.11	104.9	40.5	109.2	42.89	113.5	45.28	117.8	47.5
92.1	33.39	96.4	35.78	100.7	38.17	105	40.56	109.3	42.94	113.6	45.33	117.9	47.56
92.2	33.44	96.5	35.83	100.8	38.22	105.1	40.61	109.4	43.0	113.7	45.39	118	47.61
92.3	33.5	96.6	35.89	100.9	38.28	105.2	40.67	109.5	43.06	113.8	45.44	118.1	47.67
92.4	33.56	96.7	35.94	101	38.33	105.3	40.72	109.6	43.11	113.9	45.5	118.2	47.72
92.5	33.61	96.8	36.0	101.1	38.39	105.4	40.78	109.7	43.17	114	45.56	118.3	47.78
92.6	33.67	96.9	36.06	101.2	38.44	105.5	40.83	109.8	43.22	114.1	45.61	118.4	47.83
92.7	33.72	97	36.11	101.3	38.5	105.6	40.89	109.9	43.28	114.2	45.67	118.5	47.89
92.8	33.78	97.1	36.17	101.4	38.56	105.7	40.94	110	43.33	114.3	45.72	118.6	47.94
92.9	33.83	97.2	36.22	101.5	38.61	105.8	41.0	110.1	43.39	114.4	45.78	118.7	48.0
93	33.89	97.3	36.28	101.6	38.67	105.9	41.06	110.2	43.44	114.5	45.83	118.8	48.06
93.1	33.94	97.4	36.33	101.7	38.72	106	41.11	110.3	43.5	114.6	45.89	118.9	48.11
93.2	34.0	97.5	36.39	101.8	38.78	106.1	41.17	110.4	43.56	114.7	45.94	119	48.17
93.3	34.06	97.6	36.44	101.9	38.83	106.2	41.22	110.5	43.61	114.8	46.0	119.1	48.22
93.4	34.11	97.7	36.5	102	38.89	106.3	41.28	110.6	43.67	114.9	46.06	119.2	48.28
93.5	34.17	97.8	36.56	102.1	38.94	106.4	41.33	110.7	43.72	115	46.11	119.3	48.33
93.6	34.22	97.9	36.61	102.2	39.0	106.5	41.39	110.8	43.78	115.1	46.17	119.4	48.39
93.7	34.28	98	36.67	102.3	39.06	106.6	41.44	110.9	43.83	115.2	46.22	119.5	48.44
93.8	34.33	98.1	36.72	102.4	39.11	106.7	41.5	111	43.89	115.3	46.28	119.6	48.5
93.9	34.39	98.2	36.78	102.5	39.17	106.8	41.56	111.1	43.94	115.4	46.33	119.7	48.56
94	34.44	98.3	36.83	102.6	39.22	106.9	41.61	111.2	44.0	115.5	46.39	119.8	48.61
94.1	34.5	98.4	36.89	102.7	39.28	107	41.67	111.3	44.06	115.6	46.44	119.9	48.67
94.2	34.56	98.5	36.94	102.8	39.33	107.1	41.72	111.4	44.11	115.7	46.5	120	48.72

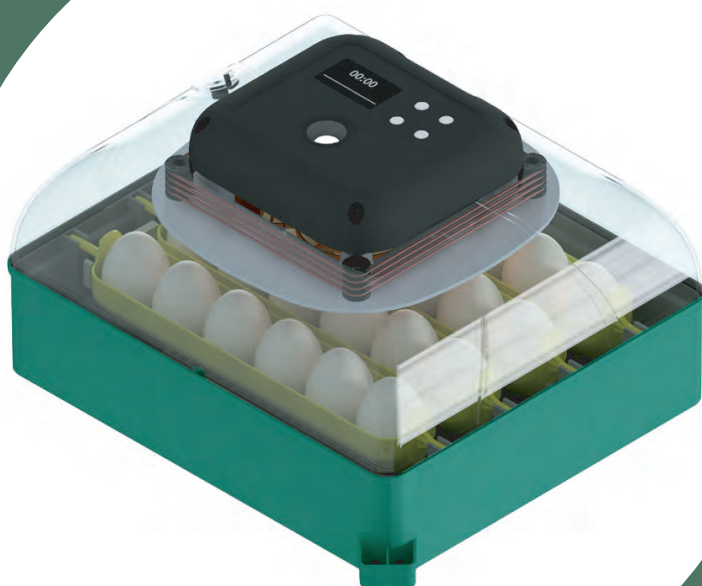

Kontaktujte nás!

📍 **AGROFORTEL, s.r.o.**

Jaurisova 515/4, 140 00 Praha, IČO: 06410499

☎ **+420 380 60 30 30**

✉ **agrofortel@agrofortel.cz**