


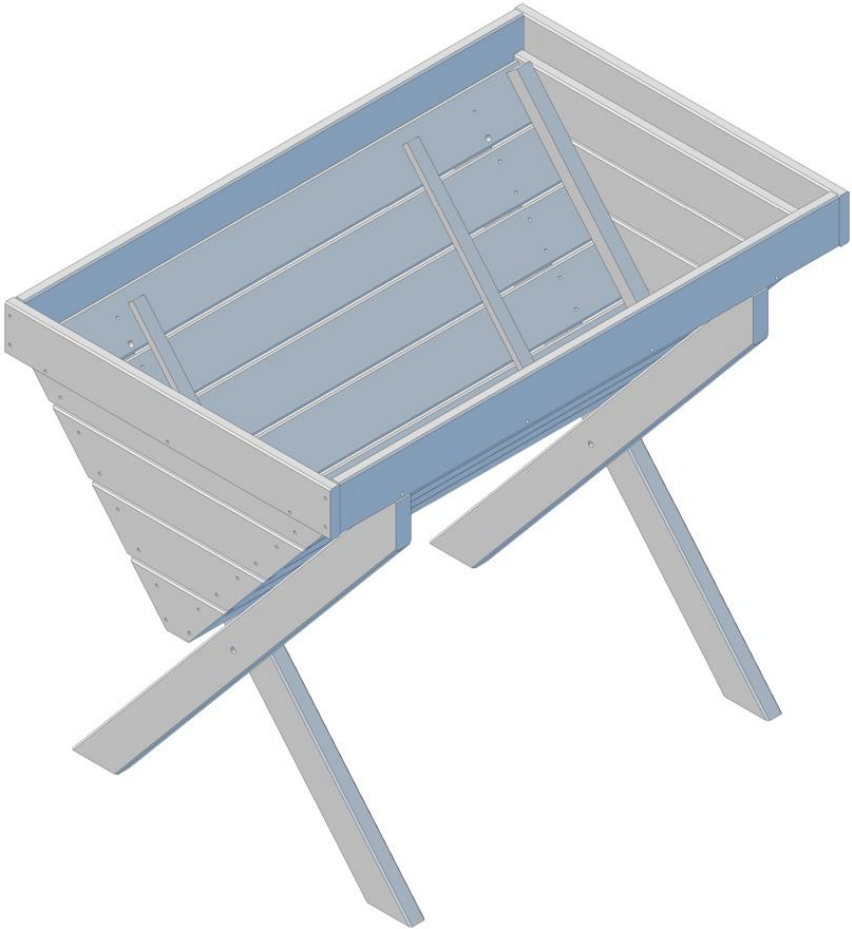

# Planter LaVender

## EQUIPMENT




1 person




Drill  
(PZ 2)

## PARTS


**1** 2x

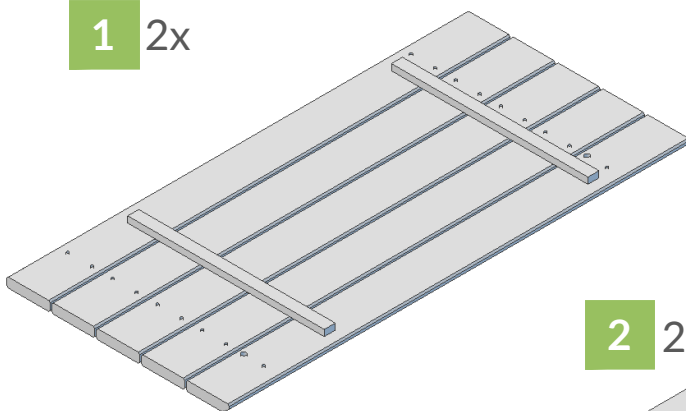


**2** 2x

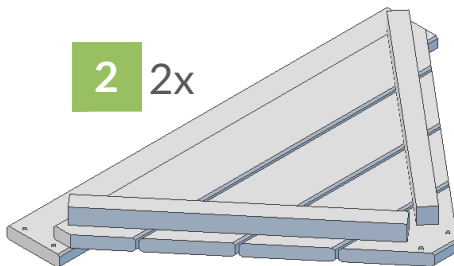

**3** 4x

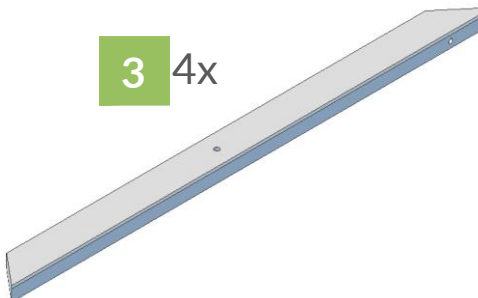

## PARTS

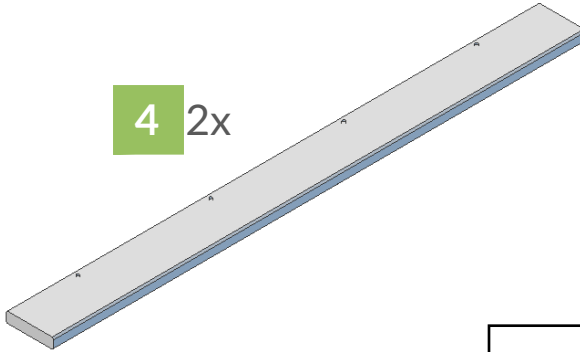

**5** 1x



LINER

## FITTINGS

**A**

6x



M8

**B**

6x



M8x70 mm

**C**

28x



4x40 mm

**D**

32x



5x60 mm

**E**

12x



4x35mm


2x



Allen Key  
(no. 5)

## STEP 1


---

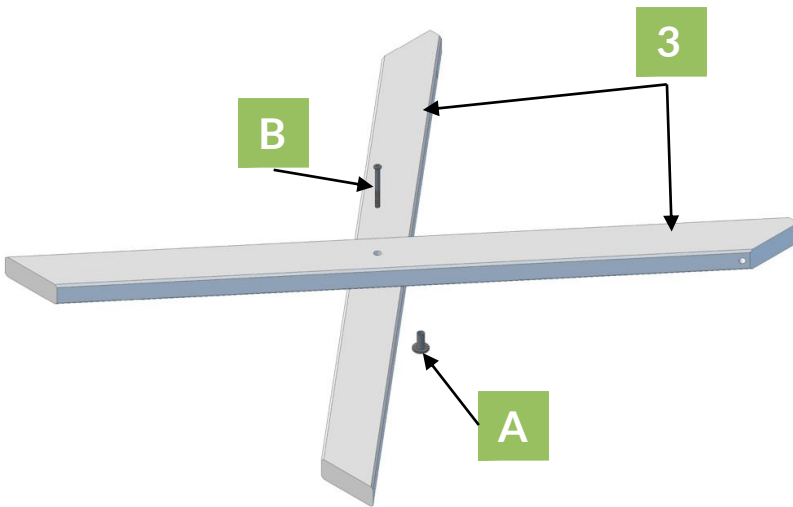


**DO NOT TIGHTEN THE BOLTS TOO MUCH**

**REPEAT STEP TWO TIMES**

## STEP 2

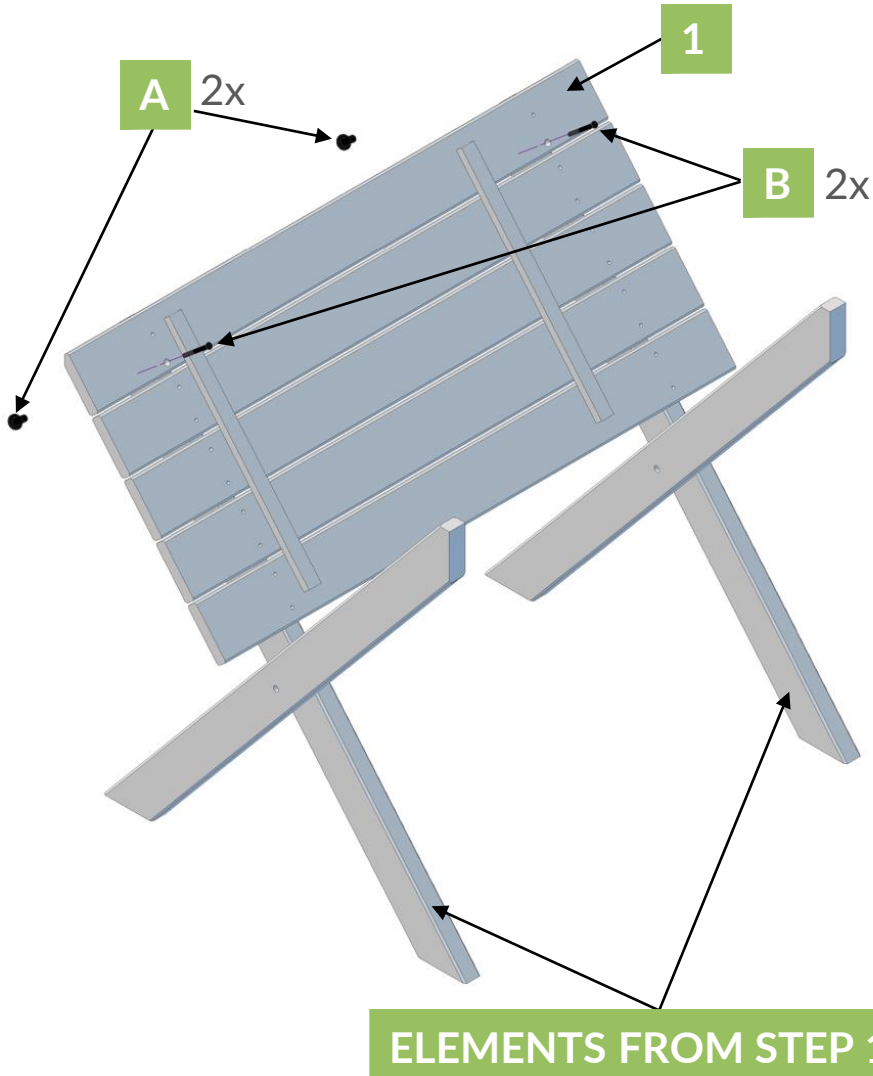


## STEP 3

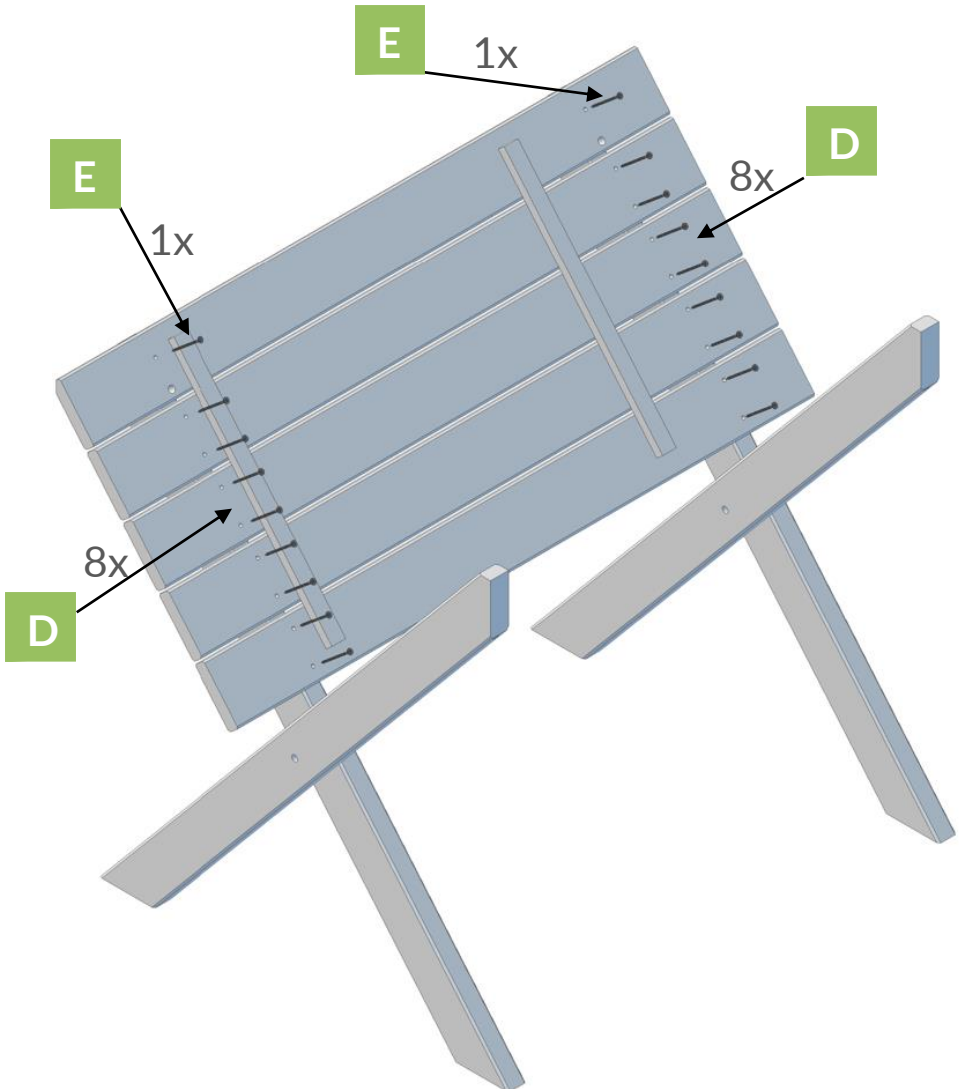


**REPEAT STEP 2 AND 3 TWO TIMES**

## STEP 4

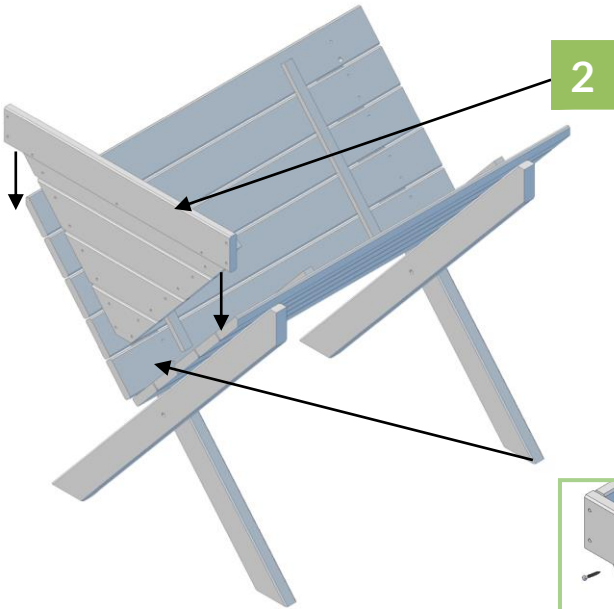

5x **C**


GENTLY LIFT BOTH SIDES OF THE  
PLANTER SO IT WILL STAND ON THE  
LEGS

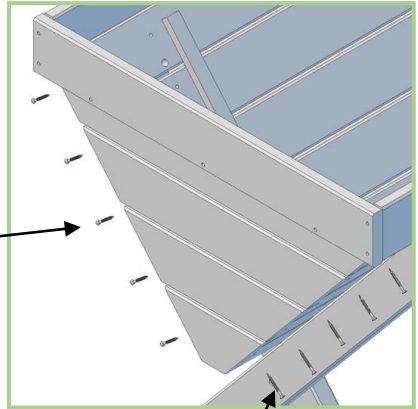

**C** 5x

REPEAT STEP TWO TIMES


## STEP 5

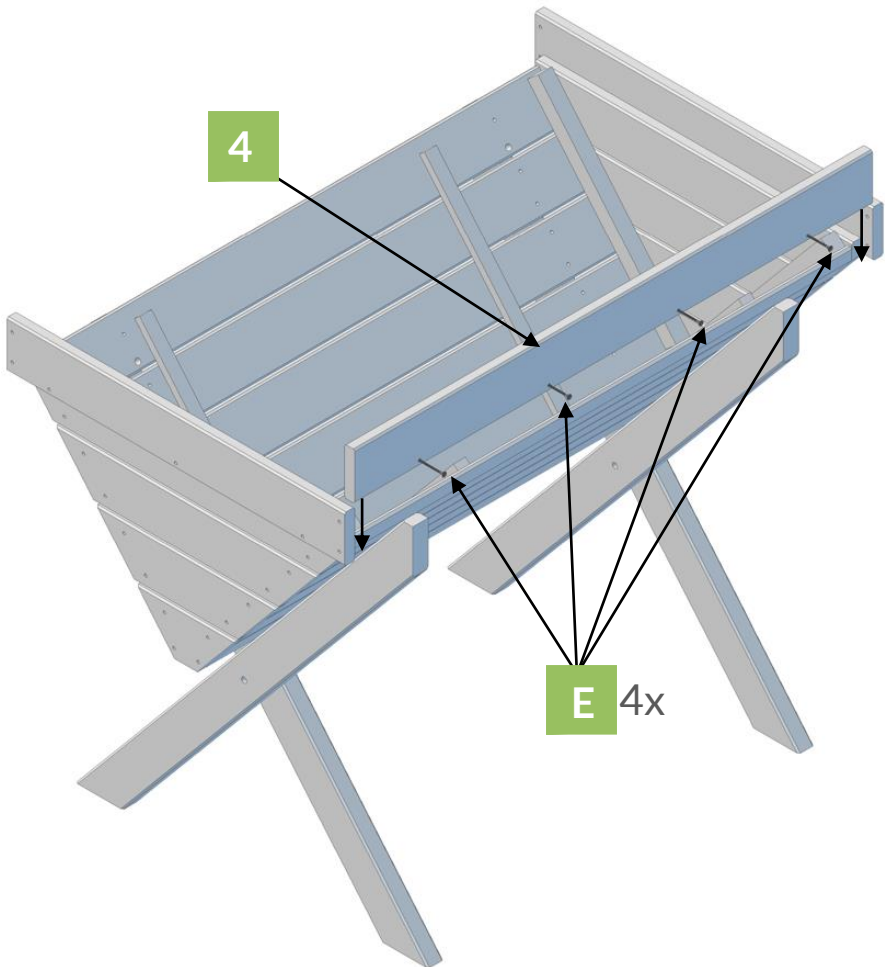

**REPEAT STEP TWO TIMES**

## STEP 6


---

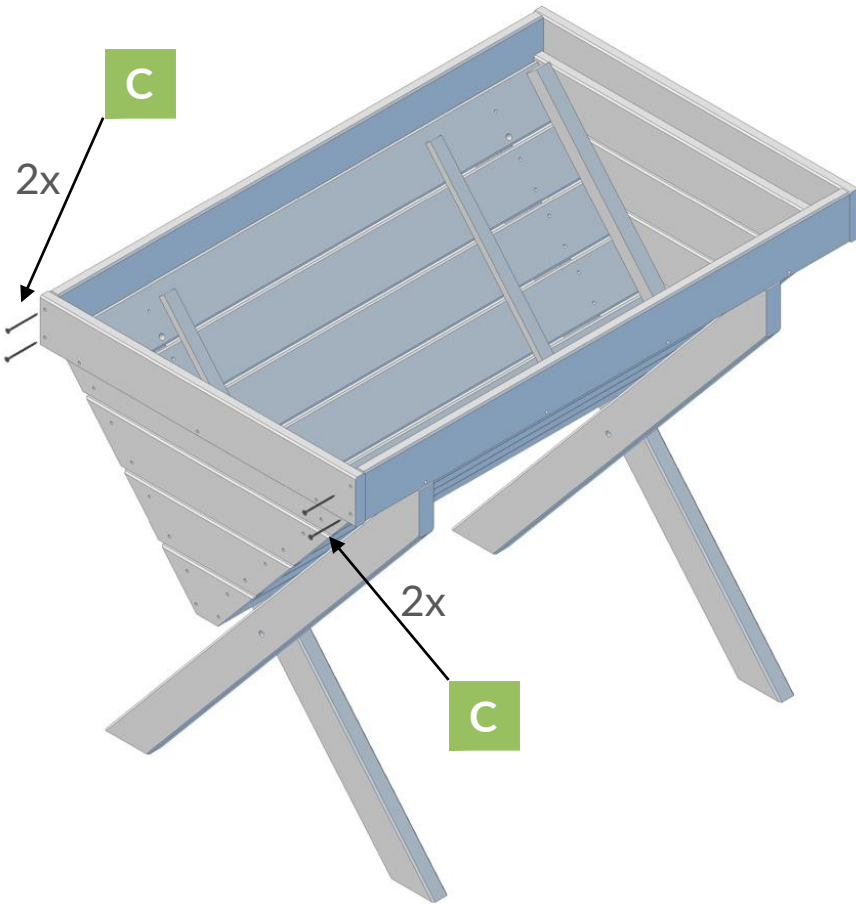

**REPEAT STEP TWO TIMES**

## STEP 7

---

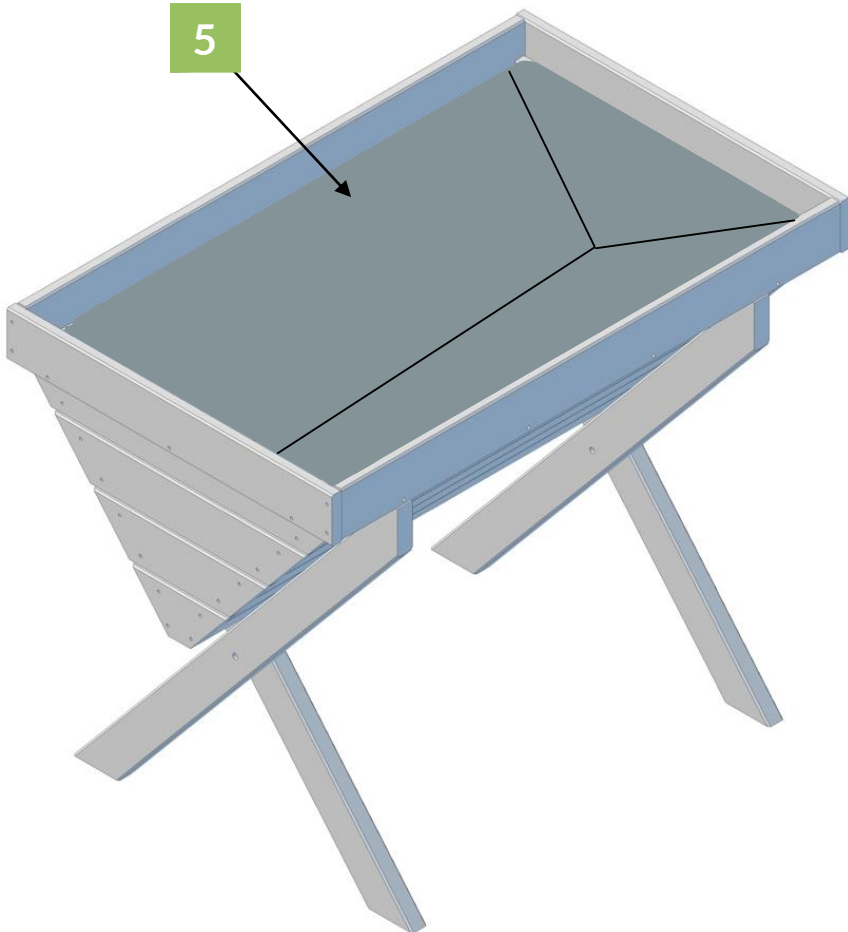

**PUT THE LINER INSIDE**